

Title:	Carrousel Rotation on pressing Knob	ID:	
		0025	
Date in:	Response:	Model:	Author:
2006-05-08	2006-05-08	STX220	CMa

Q:

Carrousel turns by pushing initialize button
When STX220 is not control by outside device, the carrousel turns to CW for 1 step by pushing initialize button for 1 time. If the initialize button is kept pushed, the carrousel keeps turning "1 step turn => 2 step turn => 3 step turn => ". What is this movement/function for ?

A:

When the unit is initialized you may look at the content of the carrousel without opening the glass door by pressing the knob. When you press the knob for longer time it will make the carrousel to rotated 1/3 revolution.