

Title:	<b>Backup Cooling Connections Input and Output</b>	ID:	
		334	
Date in:	Response:	Model:	Author:
2011-04-19	2004-04-27	STX40	CMa

**Q:**

As far as we have seen, only input of CO<sub>2</sub> gas to the backup system > is necessary. Why does the output exist ? Does CO<sub>2</sub> gas circulate ?

**A:**

We channel the gas though the chamber. So, the 2nd is exhaust - that we recommend to link to the outside.