

Title:	Turn Swap Transferstation	ID:	
		0243	
Date in:	Response:	Model:	Author:
2003-05-15	2003-05-15	-	CMa

Q:

When a customer orders the optional 90 or 180 degree transfer station, how does the software know that the new station is installed ?

I realized this morning that Alan is under the impression that the customer can just plug in the optional transfer station and the unit will function properly.

Is this true ?

A:

In case of an 90 (landscape / portrait) this is correct. On a 180 (Swap Station) the surrounding system is the master an has to define what position needs to be in a which out.