Questions & Answers

Title:	Swap Station 1912 command does not work				ID:
					0280
Date in:		Response:	Model:	Author:	
2007-05-26		2007-05-26	-	СМа	

Q:

We replaced the standard TurnStation against a SwapStation. The 1912 command does not work.

A:

The SwapStation works in SlaveMode (the user defines the station position). The SlaveMode must be activated in the FW. You need to install a new FW with the SlaveMode (3105) activated.