

| Title:     | Title: User Door Switch does not Work – Bypass<br>Switch |            |        |         | ID:  |
|------------|--|------------|--------|---------|------|
|            |  |            |        |         | 0285 |
| Date in:   |  | Response:  | Model: | Author: |      |
| 2006-12-18 |  | 2006-12-18 | -      | СМа     |      |

## **Door Bypass Switch**

In order to facilitate Service and Maintenance Work a Door Bypass Switch is implemented. The Door Bypass Switch is located on the connector panel of the Electronic Controller Module behind panel cover. Make sure that the Door Bypass Switch is switched OFF during normal operation.

