

Title:	Change of the DM82				ID:
				0031	
Date in:		Response:	Model:	Author:	
2002-10-04		2002-10-04	-	СМа	

The change of the DM82 will only be effective after a initialization. After you changed the value you have to send a Reset (ST 1900) and then re-initialize the unit (ST 1801). The change of the value in DM82 will lost after a power cycle.