## **Questions & Answers**

| Title:     | ULT Compressor Switches |            |        |         | ID: |
|------------|-------------------------|------------|--------|---------|-----|
|            |                         |            |        | 0397    |     |
| Date in:   |                         | Response:  | Model: | Author: |     |
| 2014-07-20 |                         | 2014-07-20 | STX40  | СМа     |     |

## Q:

Can you help the user to take the plates out?

## A:

Please find attached pictures showing the circuit breakers of the 1st and 2nd stage compressors. It will be the easiest if you switch the 2nd stage compressor off (see rotation switch in attached pic.) and wait until the chamber temperature has risen. You then may try to initialize the unit and remove plates by sending commands.

